


# Assembly Instructions

Please keep for future reference



## Aqua Nano Bow 60

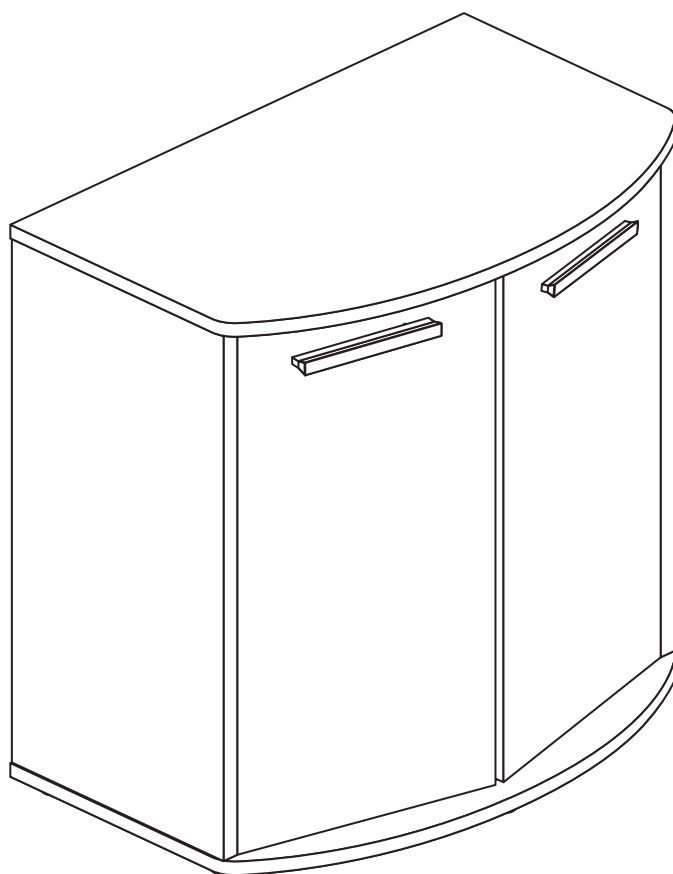

Version 1 : 16/10/2017

Important - Please read these instructions fully before starting assembly

ALR3437

# Safety and Care Advice

## Important - Please read these instructions fully before starting assembly

- Warning: This unit is heavy. Please lift with care.
- Check you have all the components and tools listed.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Parts of the assembly will be easier with 2 people.

- Make sure you have enough space to layout the parts before starting.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.

• **Safety note: This unit must be secured to a wall using the overbalance protector kits supplied.**

- Dispose of all packaging carefully and responsibly.

## Care and maintenance


- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Contact Us


Aqua Pacific UK Ltd.  
Unit 10, Oriana Way  
Nursling Industrial Estate  
Southampton  
SO16 0YU

Tel +44 (0) 2380 734000  
Fax +44 (0) 2380 740200  
Sales@aquapacific.co.uk

### Tools



Rule



Spirit level



Cross-head screwdriver



Scissors



Hammer




Eye protection  
(when using a hammer or drill)




Electric drill  
(do not use for fitting screws)

# Panels

Please check you have all the panels listed below

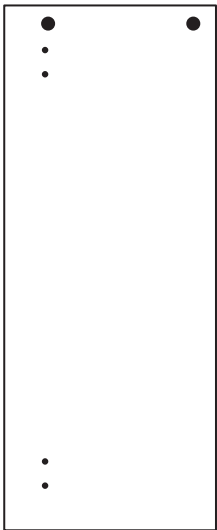


① Left Side (DF-00018252)  
(69.4 x 28cm)

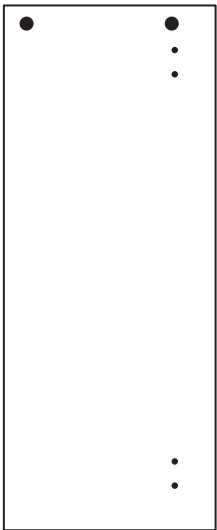


② Right Side (DF-00018253)  
(69.4 x 28cm)




③ Divider (DF-00018254)  
(69.4 x 32.8cm)

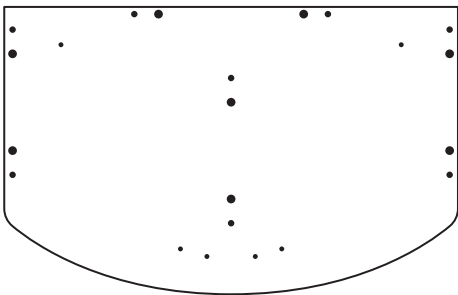


④ Top (DF-00018250)  
(60 x 38cm)

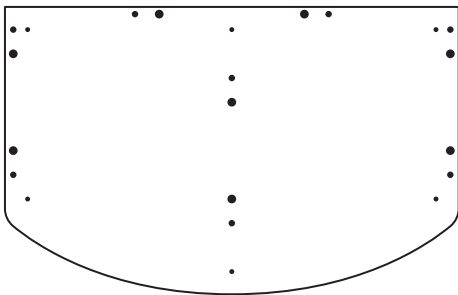

⑤ Base (DF-00018251)  
(60 x 38cm)



⑥ Back Panel (DF-00018255)  
(69.4 x 39.6cm)

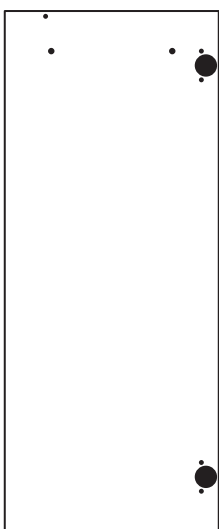


⑦ Left Door (DF-00018256)  
(68.8 x 28.3cm)



⑧ Right Door (DF-00018257)  
(68.8 x 28.3cm)

# Fittings


Please check you have all the fittings listed below



Large Metal Dowel (F901) x 8



Large Locking Cam Nut (F900) x 8



Wooden Dowel (F22) x 16



40mm Screw (F910) x 8



25mm Screw (F95) x 4




25mm Screw (F50) x 6




Large 13mm Screw (F63) x 12




Small 13mm Screw (F109) x 2

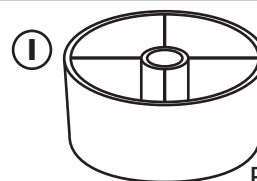


Feet (F854) x 6

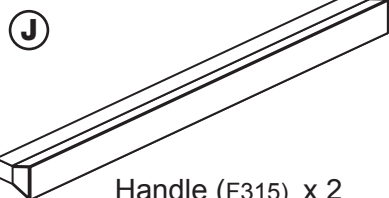


Handle (F315) x 2

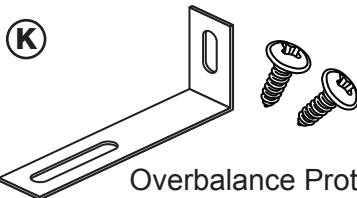


Overbalance Protector Kit (F474) x 2

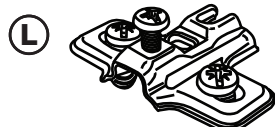


Hinge Plate (F523) x 4

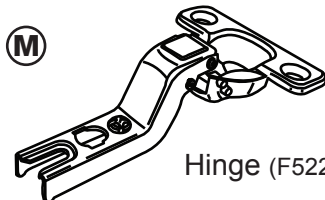

Hinge (F522) x 4

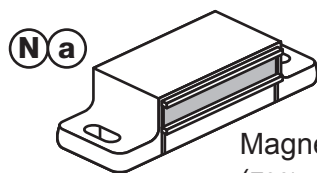

Magnetic catch (F38) x 2



Magnetic plate (F41) x 2


## Step 1

### Prepare the Left Side

Tap 4 Wooden Dowels into the Left Side.

Insert 2 Large Locking Cam Nuts into the Left Side.

Fit 2 Hinge Plates onto the Left Side, making sure that the slot is facing towards the finished front edge.

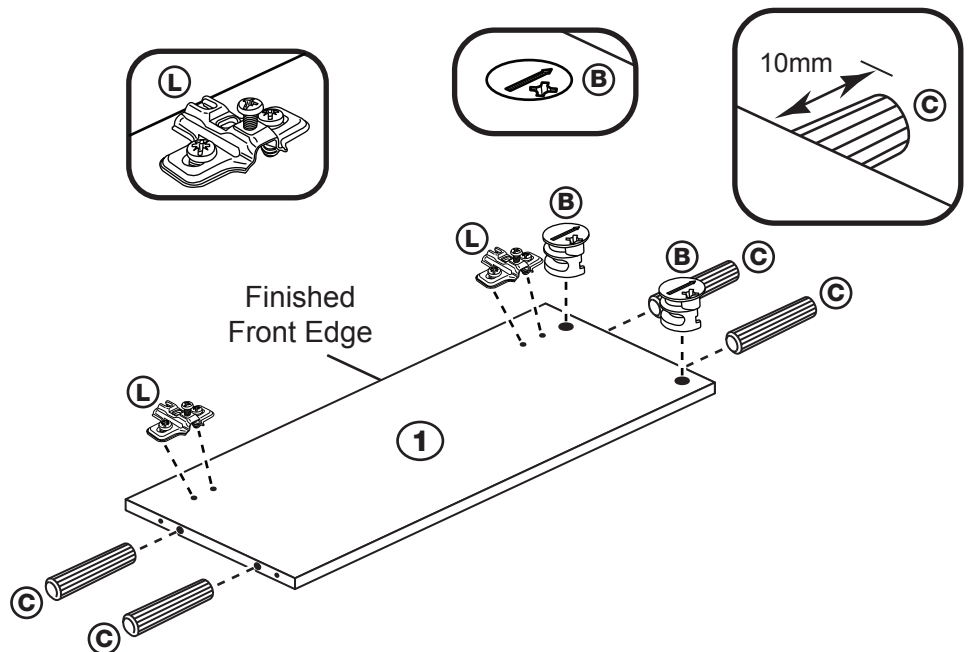


## Step 2

### Prepare the Right Side

Tap 4 Wooden Dowels into the Right Side.

Insert 2 Large Locking Cam Nuts into the Right Side.


Fit 2 Hinge Plates onto the Right Side, making sure that the slot is facing towards the finished front edge.

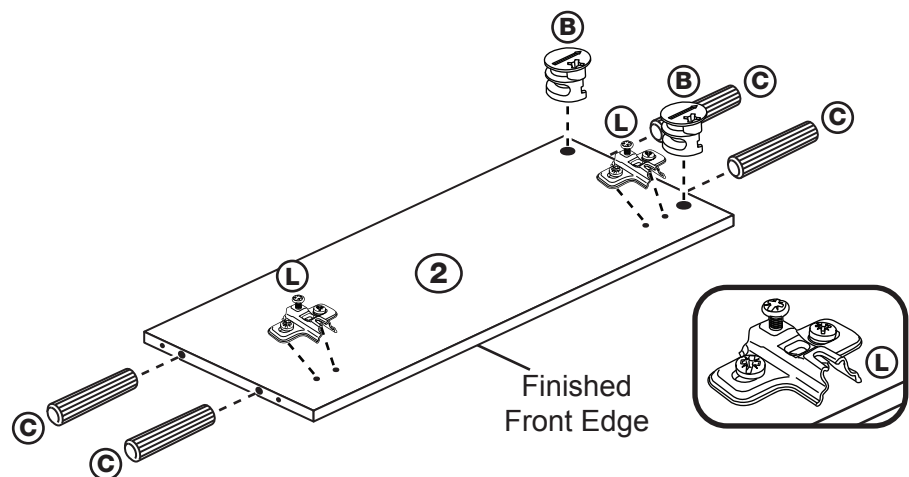

## Step 3

### Fit the Left and Right Side to the Base

Push the Left and Right Side onto the Base and fit them using four 40mm Screws.

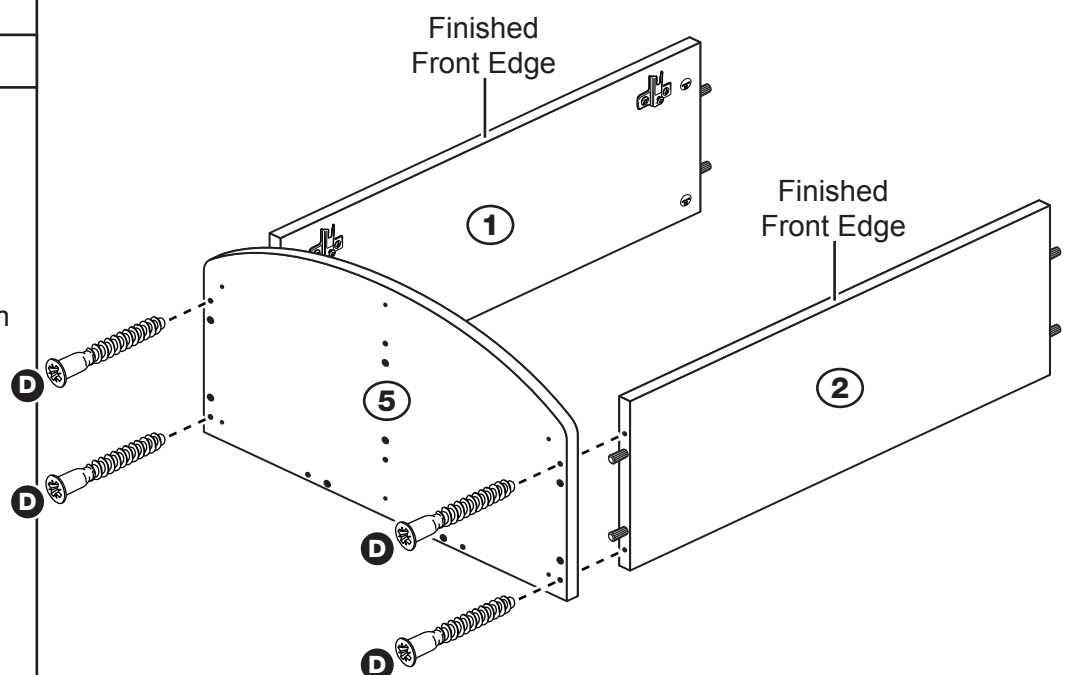


## Step 4

### Prepare the Back

Tap 4 Wooden Dowels into the Back.


Insert 2 Large Locking Cam Nuts into the Back.

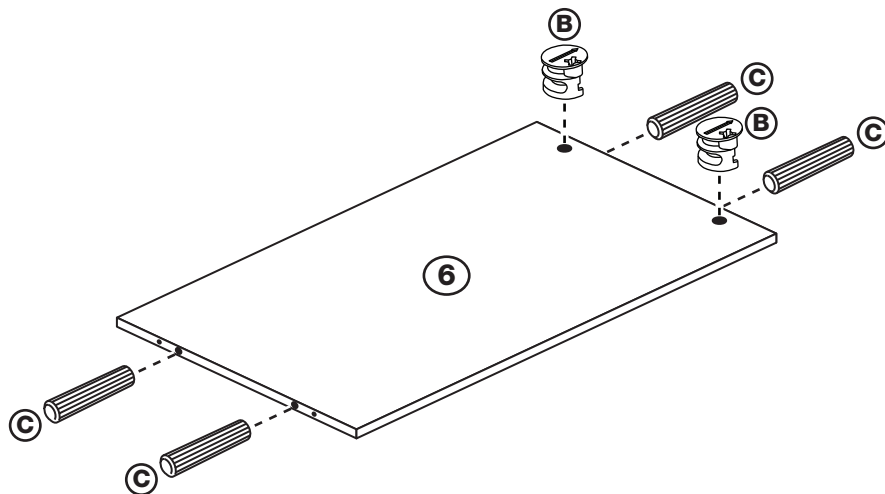

## Step 5

### Fit the Back

Push the Back onto the Base and secure it using two 40mm Screws.

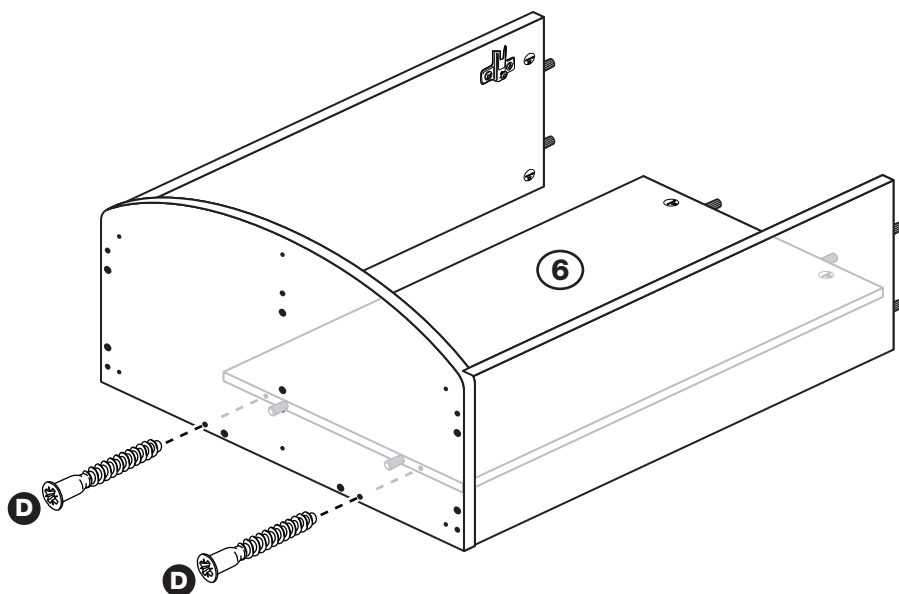


## Step 6

### Prepare the Divider

Tap 4 Wooden Dowels into the Divider.


Insert 2 Large Locking Cam Nuts into the Divider.

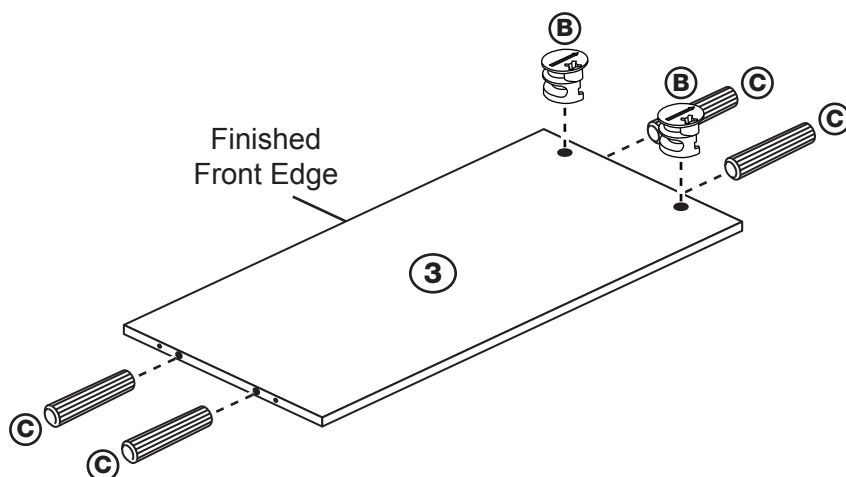

## Step 7

### Fit the divider

Push the Divider onto the Base and fit it using 2 40mm screws.

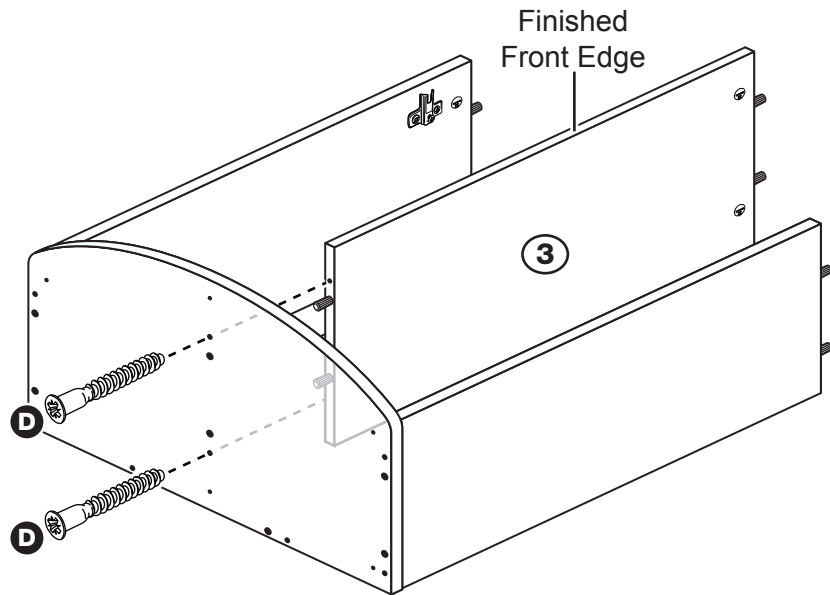

## Step 8


### Prepare the Top

**a:** Screw 8 Metal Dowels into the Top.


**b:** Fit the 2 Magnetic Catches to the shallow mark-holes in the Top using 4 of the Large 13mm Screws.

Loosely fit the 2 Brackets from the Overbalance Protector Kits to the shallow mark-holes drilled into the Top using 1 of their Screws.


**Note:** Only fit 1 of the Screws, the other 1 will be fitted later.

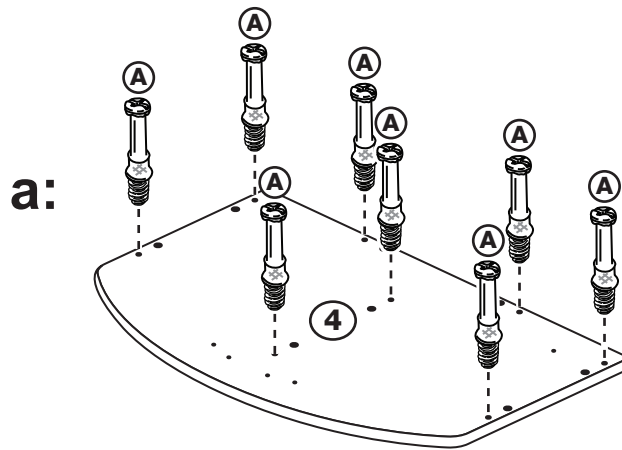

**b:**

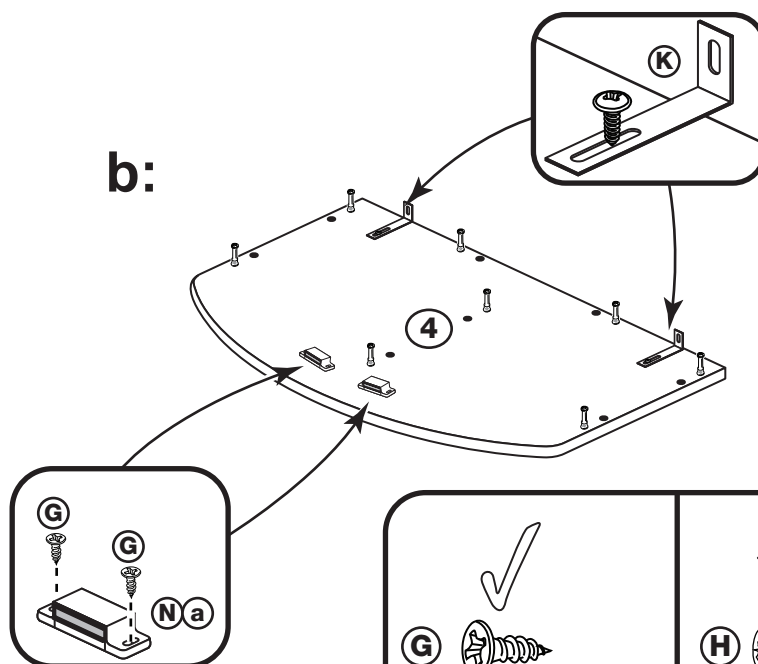

Large 13mm Screw

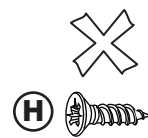


Small 13mm Screw

## Step 9

### Fit the Top

Push the Top onto the assembly.


Use a screwdriver to tighten the 8 Large Locking Cam Nuts fitted to the Sides, Divider and Back.

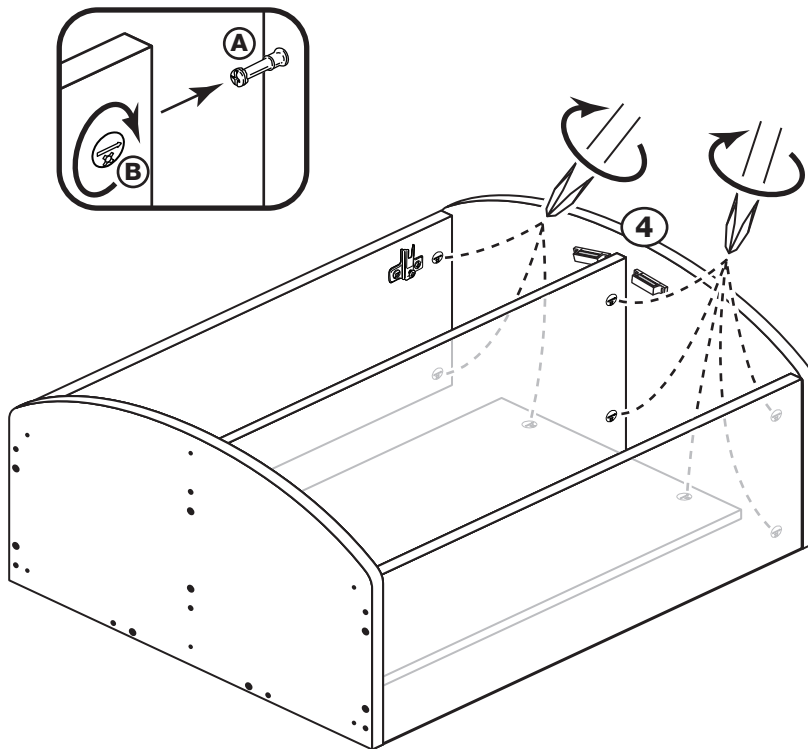

## Step 10

### Fit the 6 Feet

Screw the Feet onto the mark-holes in the Base using the six 25mm Screws.

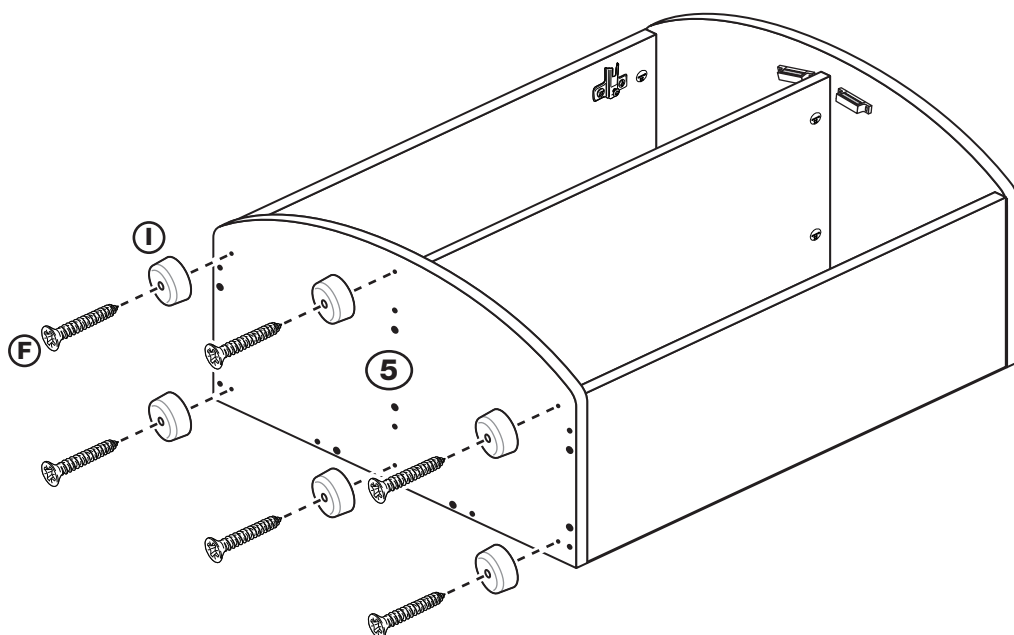



## Step 11

### Secure the unit to a wall

**a:** Before fitting the unit to a wall, use a spirit level to check the top of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level.

To prevent possible overbalancing this unit must be secured to a suitable wall by fitting the 2 Overbalance Protector Kits to a wall.

**b:** Push the unit up against the wall and slide the Brackets against the wall. Fit the 2nd Screw from the kits into the underside of the Top panel.


Mark the slot at the back of the Brackets for drilling into the wall.

Wall fixings are not supplied as they will need to suit the wall type.




Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

**This unit must be fixed to a wall using the 2 Overbalance Protector Kits provided**

**a:**

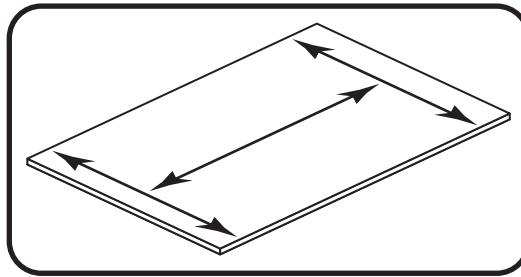

**b:**

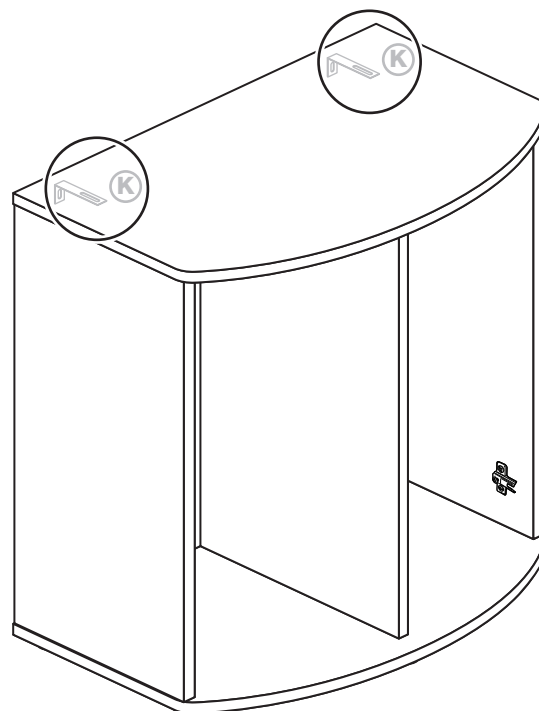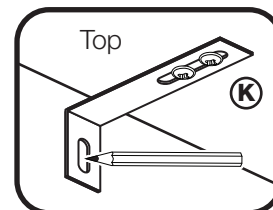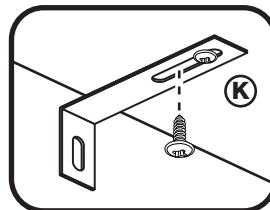




## Step 12

### Prepare the 2 Doors

Push fit 2 Hinges into each of the 2 Doors.

Secure each hinge with two Large 13mm Screws fitted using the shallow mark holes.

Fit a Magnetic Plate to each Door with a Small 13mm Screw using the shallow mark hole.

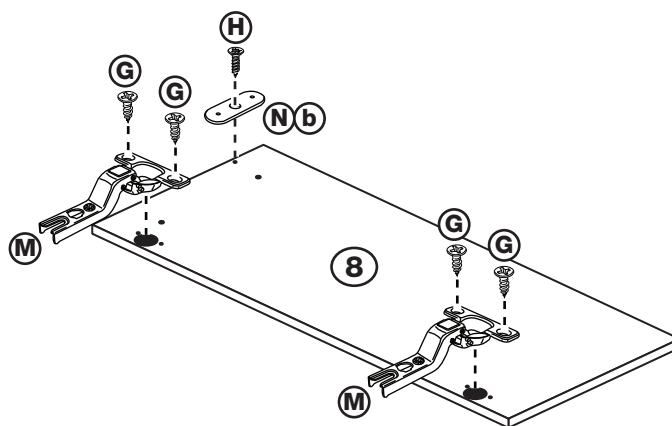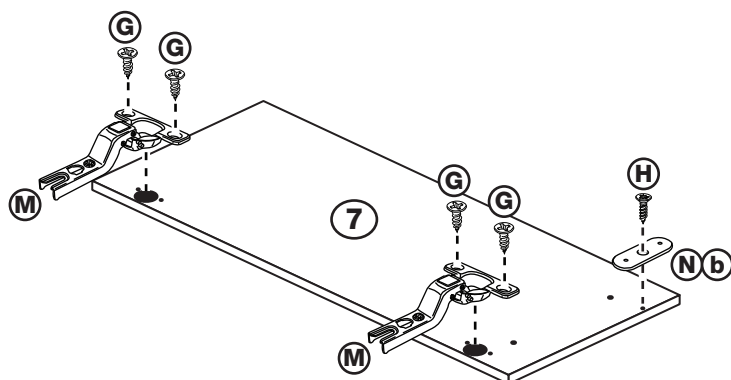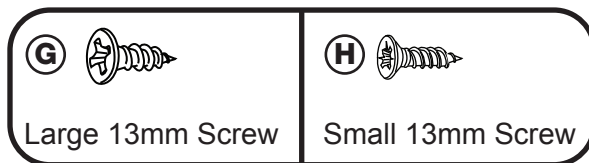

## Step 13

### Fit the Doors and Handles

The easiest way to attach each Door is to fit the top Hinge first, then align and fit the other Hinge.



**a:** Push the Hinge onto the front part of the Hinge Plate. The recess at the bottom of Screw B goes into the slot in the Hinge Plate.

**b:** Keep the Hinge FLAT against the Hinge Plate as you slide it across as far as it will go. Tighten Screw A.

**c:** The Hinge must be flat against the Hinge Plate prior to any adjustment.

**d:** The Hinge must NOT BE AT AN ANGLE to the Hinge Plate when assembled. This would indicate that the recess at the bottom of Screw B had not located in the slot in the Hinge Plate and the Hinge would not be secure. Remove the Hinge from the Hinge Plate and then re-assemble being careful to follow instructions a-c.

**e:** Attach a Handle to each Door using the 25mm Screws.

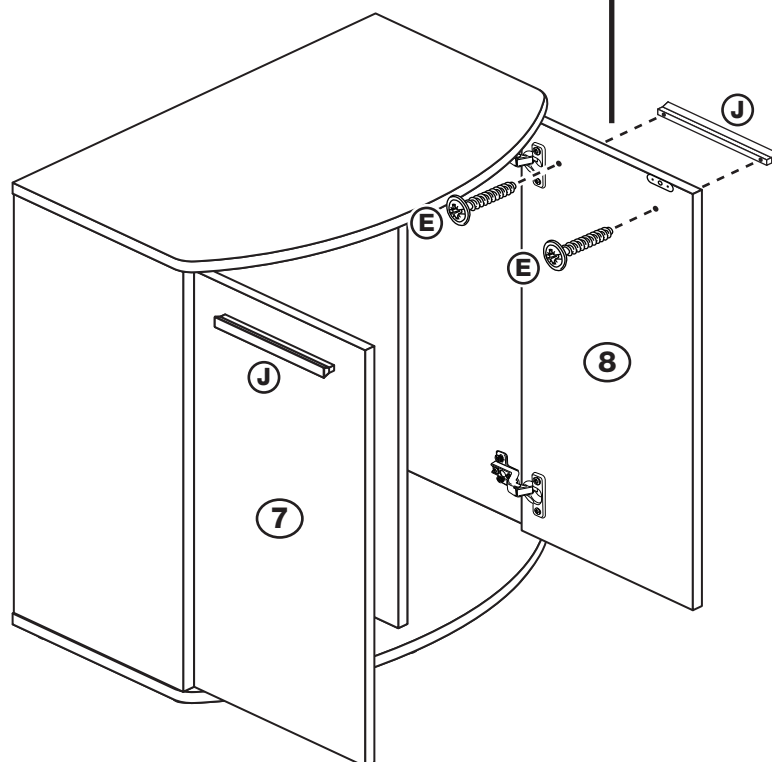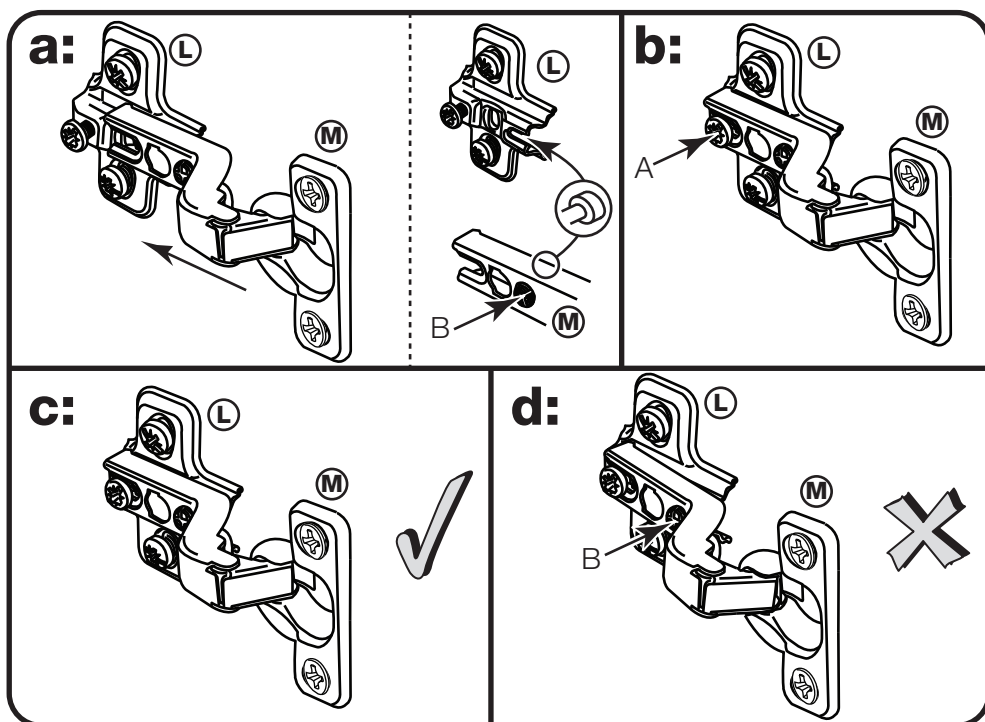

**Peel off the protective coating on the panels and edging tape where present**

## Step 14

### Adjust the doors if needed

**a:** Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

### **b: Height adjustment.**

Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.


### **C: Forward and Back adjustment.**

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.


### **d: Sideways adjustment.**

To move door 'out' loosen screw C. To move door 'in' tighten screw C.


**a:**

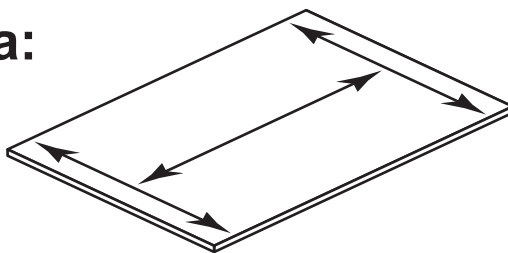

**b:**

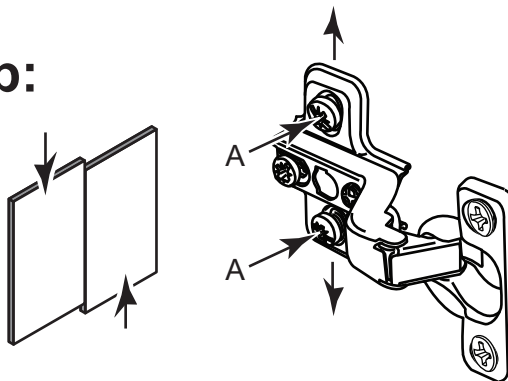

**c:**

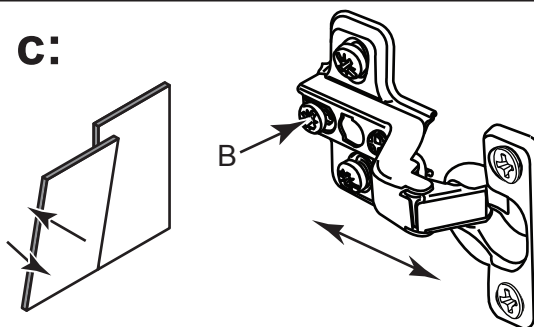

**d:**

