AquaStyle 850/980

Aqua One®




Important Safeguards

This appliance is not intended for use by children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

Warning: To guard against injury, basic safety precautions should be observed, including the following:

- 1. Read and follow all safety instructions before using this appliance.
- 2. Danger: To avoid possible electric shocks, special care should be taken since water is employed in the use of aquarium equipment, for each of the following situations do not attempt repairs yourself. Return the appliance to an authorised service facility for service or discard the appliance.
- a) If the light falls into water, do not reach for it, unplug it and then retrieve it. If the electrical components of the appliance get wet, unplug the appliance immediately (non immersible equipment only).
- b) If the aquarium shows any sign of abnormal water leakage, immediately unplug it from the power source.
- c) Carefully examine the aquarium after installation. It should not be plugged in when there is water on parts which are not intended to be wet.
- d) Do not operate any aquarium if it has a damaged cord or plug, or if it is malfunctioning, or dropped or damaged in any manner.
- A "drip loop" (see the diagram) should be arranged by the user for each cord connecting an aquarium component to a receptacle . The drip loop is the part of the cord below the level of the receptacle or the connector if an extension cord used. It is used to prevent water traveling along the cord and coming in contact with the receptacle.
- If the plug or receptacle does get wet, do not unplug the appliance. Disconnect the fuse or circuit breaker that supplies the power to the appliance, then unplug and examine for presence of water in the receptacle.
- 3. Close supervision is necessary when the appliance is used by or near children.
- 4. Always unplug the aquarium from the electrical outlet; when not in use, before putting on or taking off parts, before any type of mainte

- nance, or cleaning. Never yank the cord to pull it from the outlet. Grasp the plug and unplug to disconnect.
- 5. Do not use the aquarium for reasons other than the intended use. The use of attachments that are not recommended or sold by the aquarium manufacturer may cause the product to be unsafe. This is not recommended.
- 6. Do not install or store the aquarium where it will be exposed to weather or temperatures below freezing.
- 7. Make sure any component mounted on a tank is securely installed before operating it.
- 8. Read and observe all the important notices on the aquarium.
- 9. Ensure input voltage is the same voltage as your local power supply.
- 10. If an extension cord is necessary, a cord with a proper rating should be used. Care should be taken to arrange the cord so that it will not be tripped or pulled.
- 11. A **G.F.C.I** (Ground fault circuit interrupter) & surge protector is recommended for all electrical appliances.
- 12. Ensure your hand is dry when turning the power switch on/off and when inserting/removing the power cord from the receptacle.
- 13. If you are in any doubt about the electrical installation or safety of this product you must consult a qualified electrician.

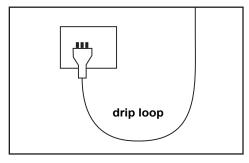


For Guarantee Conditions, please refer to the Guarantee form that is enclosed with this product.

Before First Use / Preparation

Read and follow all the instructions, even if you feel you are familiar with the product and find a place to the instructions handy for future reference. Your attention is drawn particularly to the sections concerning "IMPORTANT SAFE-GUARDS" and the "WARRANTY CONDITONS". Please insure you retain your original purchase receipt in the event that warranty service is required.

Know Your Tank

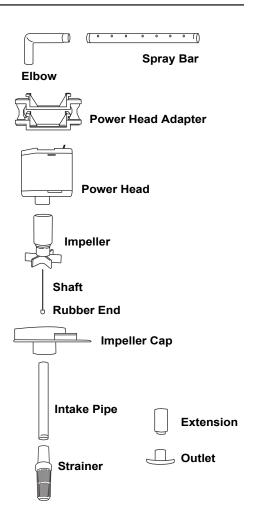


Carefully unpack the aquarium making sure you keep all the packing material until all the parts of the product have been found and the product has been assembled.

This Product is shipped to you in a factory sealed carton. Should the Product be damaged, dropped, malfunctions in any way, or if the glass is damaged and requires replacement, contact the retailer where the product was purchased for inspection.

Replacement Parts & Filter Media

Use Aqua One Genuine Spare Parts Only. See your local Aqua One Dealer and look for the number listed below for the spare part you require. Alternatevely you will find these numbers on the silver label located on the product.

AR850/980 Black Sponge 4S AR850/980 White Wool Pad 4W AR850/980 Carbon Cartridge 4C AR850/980 Impeller 4I

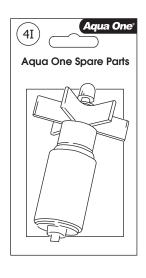

Set Up Instructions

- 1. Remove the **Filter** and **Light Unit** from the **Aquarium Body**.
- 2. Take all the lids on the Filter Unit off,



- 3. Remove the **Spray Bar, Power Head** and **Filter Trays**.
- 4. In the second filter tray you will find the remaining accessories required to complete the set up of your filter system.
- 5. Take the **Filter Trays** and all filter media to the sink. Ensure there is no detergent residue in or around the sink.

 Open the Ceramic Noodles and empty them into the Filter Trays. Refer to Filter Media Set Up Diagrams below for the correct setup of your aquarium.



7. Run tap water thought them to remove any dust.

DO NOT WASH IN SOAP OR DETERGENT.


8. Rinse the **Black Sponge** and place it on top of the **Ceramic Noodles**.




9. Rinse the Carbon Cartridge and place this on top of the Black Sponge.



Filter Media Set Up Diagrams

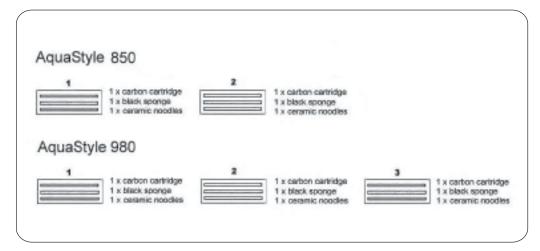

- 10. Leave the Filter Trays at the sink.
- 11. Slide the **Power Head Adaptor** into the top of the **Power Head**.

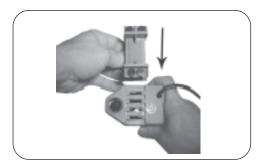

12. Insure it is inserted firmly.



13. Once complete slide the **Power Head** into the bottom of the **Filter Unit**.



14. Connect the **Intake Pipe** and **Strainer** together.



15. Slide them into the bottom of the **Power Head.**



16. Connect the **Outlet** and **Extension** together.



17. Connect them into the bottom of the **Filter Unit**.




- 18. Then place the **Trays** with the washed media inside them in to the **Filter Unit**.
- 19. You will find the silicon elbow has a tube inserted in it. This *may* need to be forced in further, having an overall length of 15cm.



120. Connect the **Spray Bar** and the **Elbow** together.




21. Insert the **Elbow** and **Spray Bar** into the top of the **Power Head**, press down firmly ensure it is a tight fit.

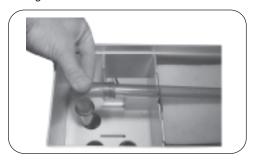

- 22. Push the first filter tray to the right as far as it will go.
- 23. You will notice the **Power Head** is sitting on an angle.




24. In order to correct this you need to slide the 0-ring on the **Spray Bar** along and position it so it is resting against the edge of the first filter tray. Do this until the **Power Head** is straight.

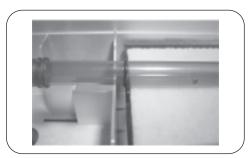


25. Place the aquarium on a flat level surface strong enough to support its weight. We recommend a genuine **Aqua One Aquarium Cabinet** (sold separately) rather than general household furniture.



26. Place the **Filter Unit** (once complete) on top of the **Aquarium Body** towards the back.



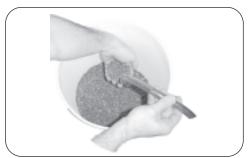

29. Place washed gravel over the base of the Aquarium.



27. Wash aquarium gravel. Place a portion of gravel into a bucket.



30. At this stage place plastic plants, decorations and heater (see Tips) into the tank.



31. Fill the aquarium with tap water to the level indicated.



32. Use **Aqua One** quality Water Conditioner (sold separately) to remove harmful chemicals from tap water. E.g. chlorine (see **Tips**)




33. Place the **Light Unit** on the front of the Aquarium.



34. Plug in the **Power Head**, **Light Unit** and **Heater** (if installed) and turn on. Refer to Important Safety guards for set up of the **Drip Loop**.



- 35. Insure the holes of the **Spray Bar** are facing down and that water is flowing through it.
- 36. Replace all lids on the Filter Unit.
- 37. Turn the light switch on ensure the lights work.
- 38. Test and adjust pH levels.

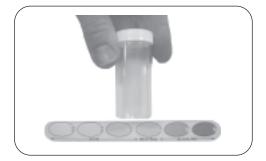

Introduction of Fish

39. Allow the aquarium to stand for 3 to 4 days before the introduction of any fish.



40. Seek advice from your retailer for correct fish numbers and species compatibility.

TIPS -

An Aqua One heater and Thermometer is required if you are setting up a tropical or saltwater aquarium. Refer to heater instructions for correct set up and positioning.

Chlorine and other heavy metals will harm your fish. Aqua One water conditioner will remove these impurities and create a safe environment for your fish.

These products are available separately from your local Aqua One Dealer.

Note: is only a guide! You should seek professional advice from your aquarium specialist at the time of purchase.

DO NOT ADD ALL FISH AT ONCE!

Build stock levels slowly over time. Allow at least one week between additions add a filter supplement to help the biological system cope with the additional waste.

Do not over crowd. Remember all fish will grow, so allow them adequate space.

Tank Maintenance

DAILY Feed your fish as per instructions on your fish food container

WEEKLY Test and adjust pH levels if needed

Use **Aqua One** quality pH test kit, available from your local Aqua One Dealer. pH is a measure of how acidic or alkaline the water is. It is measured on a scale of 0-14 in which 7 is neutral, less than 7 is acidic and more than 7 is alkaline.

Some species require specific pH levels please seek advice from your aquarium specialist.

FORTNIGHTLY 25% Water Change

What you will need: A Bucket, Gravel Cleaner, Towel, Water Conditioner, Bio Booster and clean hands. All items are available from your local Aqua One Dealer.

- 1. Unplug the **Light Unit** and remove it from the aquarium. Place it somewhere safe away from water & where it will not be broken / damaged.
- 2. Turn the Power Head off.
- 3. The fish and plants do not need to be removed when doing any maintenance.
- 4. Place the towel on the floor in front of the aquarium to guard from water spillage.
- 5. Use an **Aqua One** 4 in 1 algae scraper and gently scrape away any algae growing on the glass or filter pipes.
- 6. Using an **Aqua One** Gravel Cleaner* empty approximately 25% of the aquarium water into the bucket. Take note of how much water is emptied.
- 7. Fill the bucket up with the same amount of water that was removed from the aguarium.
- 8. Treat the tap water with **Aqua One** Water Conditioner as per the instructions on the bottle.
- 9. Let the bucket sit for 10 minutes.
- 10. Fill the aquarium up slowly to the level indicated. Fig 31
- 11. Turn the **Power Head** back on and ensure that water is flowing out of the **Spray Bar**.
- 12. Test and adjust pH levels.
- 13. Add bio booster.
- 12. Replace the Light Unit.
- * Refer to the instructions on the back of your Gravel Cleaner to ensure correct use.

Filter Maintenance

WEEKLY See diagrams on next page...

- 1. Turn the Power Head off.
- 2. Remove the Lids from the Filter Unit.
- 3. Remove the **Elbow** and **Spray Bar** unit from the top of the **Power Head**.
- 4. Remove the Carbon Cartridges and Black Sponges from the Filter Unit.
- 5. Empty a small amount of water from the aquarium into a bucket.
- 6. Rinse the **Black Sponges**. Discard the used water; do not add it back into the aquarium.
- 7. Rinse the **Carbon Cartridges** out under the tap, rinse thoroughly.
- 8. Re-insert the **Black Sponges** and **Carbon Cartridges**.
- 9. Then connect the Elbow and Spray Bar unit back onto the outlet at the top of the Power Head. Make sure the holes of the Spray Bar are pointing down onto the Carbon Cartridge and that the end of the Spray Bar has the cap fitted
- 10. Ensure the aquarium is full. Refer to Fig 31.
- 11. Turn the **Power Head** back on and ensure that water is flowing out of the **Spray Bar**.
- 12. Replace the Lids on the Filter Unit.
- 13. Add big booster.

The carbon filter cartridge should be replaced every 6 - 8 weeks for optimum filter performance.

MONTHLY See diagrams on next page...

- 1. Turn the power off. Unplug both power leads
- 2. Remove the **Light Unit** and Place it somewhere safe away from water and where it will not be broken / damaged.
- 3. Remove **Filter Unit** from aquarium and take to sink and remove the lid.
- 4. Disconnect **Spray Bar** and **Elbow** and clean with double ended pipe brush.
- 5. Slide the **Power Head** off the bottom of the **Filter Unit** Fig 1.
- 6. You will need a flat head screw driver Fig 2.
- 7. Holding the **Power Head** upside down Insert the screw driver into the larger slot of the **Power Head**. Fig 3

- 8. Carefully leaver the screw driver downwards.
- 9. This will pop one side of the $lmpeller\ Cap$ off Fig 4.
- 10. Turn the **Power Head** around, repeat steps 7, 8 & 9.
- 9. Remove the **Black Rubber End Cap**. The Shaft may also come out at the same time, if not then pull it out.
- 7. Grasp the **Impeller Cap** and remove it from the Impeller well Fig 5.
- 8. Use a double ended pipe brush to clean **Impeller** and inside of **Impeller well** Fig 6.
- 9. Also run a pipe brush through the outlet at the top of the **Power Head**.
- 10. Clean the **Intake pipe** and **Strainer** thoroughly.
- 11. Reconnect all parts and place **Filter Unit** back onto the aquarium.
 - 12. Ensure the power lead is not wet and plug it back in.
- 13. Turn the power back on and check that water is flowing though the **Spray Bar**.
- 14. Replace the Light Unit and Lids.


YFARI Y


The ceramic noodles are designed to be maintenance free.


NEVER RINSE THEM IN TAP WATER.


See *Hints & Tips for Best Results* for more information.


Filter Maintenance Diagrams

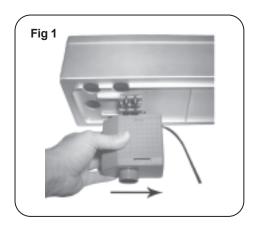


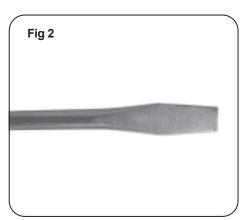

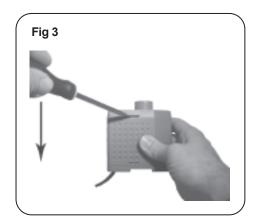

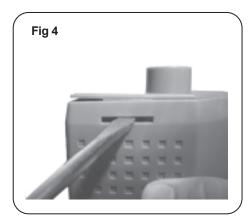

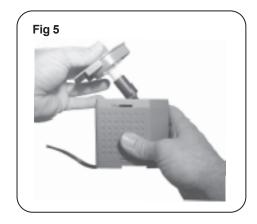

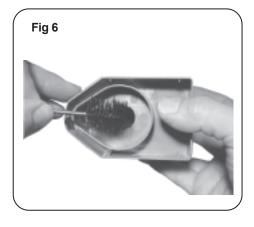

Hints & Tips For Best Results

LIVE PLANTS

Once the water conditions and pH levels have been corrected, live plants can be added to the aquarium. Remember to empty some water from the aquarium before adding anything to it.

REMEMBER LIVE PLANTS NEED TO BE FED! An aquarium safe plant fertiliser should be used.

LIGHTING

No more than 8 hours of light each day and definitely no natural light. Longer light times will accelerate algae growth in the aquarium and has no benefit to plants or fish.

- Specialist light tubes are available through retailers for saltwater and planted aquariums.
- We recommend replacing the light globe once every twelve months based on the light being on 8 hours a day as the spectrum of light changes over time.

FILTER MEDIA

Biological Filtration (Ceramic Noodles)

Biological filtration is a process where toxic nitrogen compounds such as ammonia and nitrite (fish waste) are removed from the system via a breakdown process carried out by nitrifying bacteria. (Nitrobacter and Nitrosomonas). These nitrifying bacteria need substrate with a high surface area to adhere to such as **Ceramic Noodles**.

- When starting a new system it is important to remember that bacteria takes time to develop and grow.
- You can speed up the process by 'seeding' the system with commercially available bacterial cultures / bio boosters
- Over time this media can block up or break down so it is important to monitor it. Seek

advice from your Aquarium Specialist if either of these problems arise.

Mechanical/Chemical Filtration (Carbon Cartridge)

This is the removal of dissolved organic and inorganic substances through adsorption on a porous substrate or by direct chemical removal. Dissolved organic compounds are what turns the water a yellow-brown colour or causes foaming at the surface of the aquarium and need to be removed.

- Remove carbon if treating fish with medication
- Replace every 6 8 weeks as the carbons absorption capacity will have depleted.
- Rinse well before placing in the aquarium. (in tap water)

Mechanical/Biological Filtration (Filter Sponge)

This is the process whereby suspended solids or particulate matter are removed from the water.

It is important to remove suspended solids not only to improve clarity of the water but also to:

- Avoid smothering the gills with solids such that fish cannot breathe.
- Decrease risk of disease outbreaks there are high numbers of bacteria associated with organic suspended solids.
- Protect the biological filter material from rapidly becoming clogged.
- Can also act as a biological filter medium by providing sufficient surface area to host beneficial bacteria.

Trouble Shooting

If you are in any doubt about the electrical installation or safety of this product you must consult a qualified electrician.

LIGHT UNIT DOES NOT WORK

- 1. Ensure switch is in the on position on the top of the Light Unit.
- 2. Check light is plugged into power supply and the switch is on
- 3. Check the globe is in good condition. Replace if needed.

POWER HEAD WORKING BUT NO / SLOW WATER FLOW

- 1. Check Impeller is in good condition and replace if needed.
- 2. Make sure water level in aquarium is above the Power Head. Please note the Power Head is a water proof unit.
- 3. Clean Impeller, Power Head and all Inlet and outlet pipes.
- 4. Check that the Spray Bar is inserted correctly with the end cap at the opposite end to the elbow.

AQUARIUM POSSIBLY LEAKING

- 1. Clean filter cartridge as this can create an overflow.
- 2. Make sure spray bar holes are pointed down onto the Carbon Cartridge.
- 3. Make sure water level is not to high Refer to Fig 31.
- 4. If an air stone is being used check it is not bubbling water over the rim of the aquarium if so turn the air pump down.
- 5. Make sure the aquarium is sitting on a level surface
- 6. If it is a salt water aquarium remove any salt creep as it can drain water from the aquarium.
- 7a. Remove the Light Unit & Filter Unit from the top of the aquarium. Mark the water level. Remove any excess water that may be sitting on the edge of the aquarium. Leave for an hour. If water level drops proceed to step 7b.

7b. Remove the fish, decorations and gravel. Empty the aquarium and clean the glass **DO NOT WASH IN SOAP OR DETERGENT**. Place a piece of newspaper on a flat level solid surface. Carefully fill the aquarium ensuring not to spill any water on to the newspaper. Leave the aquarium for several hours and then inspect the newspaper for wet patches.

Notes

Aguarium Model: AguaStyle 850 **Dimensions:** 84 x 44 x 59cm (6mm glass)

Aguarium Volume: 165L Filter Flow Rate: 2000/hr

Light Wattage: 2 x 30in 25W 1 x 23.5in 20W

Power Requirements: 220 ~ 240V Suitable: Coldwater, Tropical, Marine

Aguarium Model: AguaStyle 980 **Dimensions:** 99 x 47 x 60cm (8mm glass)

Aguarium Volume: 215L Filter Flow Rate: 2000l/hr

Light Wattage: 2 x 36in 30W 1 x 30in 25W Power Requirements: 220 ~ 240V

Suitable: Coldwater, Tropical, Marine



Precision Manufactured in the P.R.C. Designed in Australia by Aqua One Distributed in Australia by: Kong's (Aust.) Pty. Limited 48 Williamson Rd. Ingleburn. 2565 NSW Australia.

Distributed in New Zealand by: Kong's (NZ) Limited 52 Glenlyon Avenue. Greerton. Tauranga New Zealand.

Distributed in Hong Kong by: Kong's Aquarium Supplies Co., Ltd No 31, 3/F Thriving Industrial Centre 26-38 Sha Tsui Road, Tsuen Wan, Hong Kong.

Distributed in the UK by: Kong's (UK) Limited, C/O Aqua Pacific UK Ltd. PO Box 268 Romsey Hampshire SO51 0WW

United Kingdom.

Agua One

www.aquaone.com.au

® Aqua One and Kong's are registered trademarks.

Keep an eye out for these Aqua One products at your local retailer...



Fish keeping has never been easier...

Aqua One specialises in all of your aquarium needs.

Aqua One uses state of the art technology which results in the most efficient and superior aquarium products.

The Aqua One range includes a wide range of curved glass aquariums, air pumps, filters, power heads, heaters, reflectors, under water lighting, along with fish foods, cleaning and maintenance accessories and decorations.